

BMW

2010-14 760Li

PRECAUTIONS

Warning: Batteries produce explosive gases that may cause personal injury. Do not expose the battery to flame or sparks. Always provide adequate ventilation. Do not smoke when working near batteries. Do not place tools or any similar object on the battery.

Warning: Do not allow any battery acid to come into contact with the eyes, the skin or clothing. Wear protective clothing, gloves and eye protection. Do not tilt the battery, or acid may leak from the vent hole.

Warning: If acid is splashed into the eyes, rinse them immediately for several minutes with clear water and consult a doctor immediately. Seek medical attention immediately if battery acid is accidentally swallowed. If acid is splashed onto the skin or clothing, neutralize it immediately with a soap solution and rinse with lots of water.

On vehicles equipped with Intelligent Battery Sensor (IBS), do not under any circumstances release socket-head cap screw of IBS. Do not establish any connection between the IBS and the sensor screw.

The IBS and wiring can be destroyed by mechanical strain during battery replacement. Do not use force when disconnecting the pole shoe from the battery terminal. Do not pull on the ground cable. Do not place any tools under the IBS to lever off the pole shoe. Do not use IBS connections as levers.


On vehicles with radio code, the radio code must be re-entered after disconnecting the battery. Note stored stations and restore them after connecting the battery. Stored settings of the on-board computer and clock will also be lost. All available central keys must be re-coded for vehicles with first generation infrared transmitter locking systems. DTCs may be set in some control units after battery is connected.

BATTERY

Removal

Disconnect battery ground cable first, followed by battery positive cable. Do not disconnect battery leads while engine is running.

1. Verify that ignition and all other electrical loads are "OFF."
2. **On models equipped with revolving light,** unfasten Velcro type strap (1) and remove revolving light (2), **Fig. 1.**
3. **On all models,** open righthand luggage compartment trim flap (2) using lever (1), **Fig. 2.**

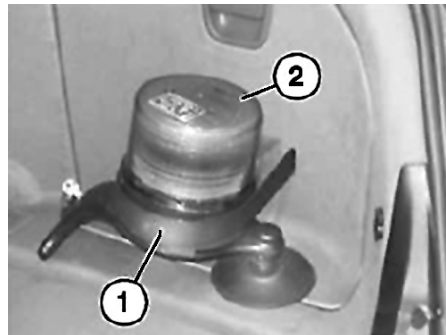


BTY120000000536

Fig. 1 Revolving light removal

4. Remove righthand luggage compartment trim flap in direction of arrow as illustrated in **Fig. 3.**
5. Remove vehicle jack screw (2) and vehicle jack (3), **Fig. 4.**
6. Fold down battery cover (1) in direction of arrow as illustrated in **Fig. 4.**
7. Open luggage compartment floor trim panel (1), **Fig. 5.**
8. Release plastic nuts (2) and remove luggage compartment floor trim panel (1) in direction of arrow as illustrated in **Fig. 5.**
9. Loosen battery ground cable terminal nut (1), **Fig. 6.**
10. Disconnect battery ground cable terminal from battery and position aside. Do not disconnect terminal by force.
11. Remove spare wheel from vehicle.
12. Loosen battery positive cable terminal nut (1), **Fig. 7.**
13. Disconnect battery positive cable terminal (2) from battery and position aside, **Fig. 7.** Do not disconnect terminal by force.
14. Remove battery retainer bracket screw (2) and bracket (1), **Fig. 8.**
15. Detach vent hose from battery.
16. Remove battery from vehicle.

Installation

1. Install battery to vehicle. Ensure battery is properly seated in mounting.
2. Attach vent hose to battery.
3. Install battery retainer bracket (1) and screw (2), **Fig. 8.**
4. Connect battery positive cable terminal (2) to battery, **Fig. 7.** **Torque** terminal nut to 44 inch lbs.
5. Install spare wheel to vehicle.
6. Connect battery ground cable terminal to battery, **Fig. 6.** **Torque** terminal nut to 44 inch lbs.
7. Install luggage compartment floor trim panel.
8. Close battery cover.
9. Install vehicle jack and screw.
10. Install righthand luggage compartment trim flap.

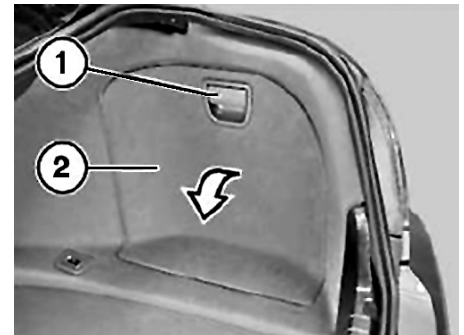

BTY120000000537

Fig. 2 Righthand luggage compartment trim flap location

11. **On models equipped with revolving light,** install revolving light (2) and secure with Velcro type strap (1), **Fig. 1.**
12. **On models equipped with sunroof,** synchronize sunroof as follows:
 - a. Press and hold sunroof switch in "LIFT" direction.
 - b. After reaching full "LIFT" position, continue holding switch for an additional 20 seconds.
 - c. Release switch for five seconds.
 - d. Hold down switch in raising position until sunroof has made a complete opening and closing.
 - e. Verify correct sunroof operation.
13. **On all models,** initialize power windows as follows:
 - a. Close all windows.
 - b. Press and hold each window switch in one touch closed position (second switch position) for 15–25 seconds.
 - c. Verify proper one touch window operation.
14. **On models equipped with mirror compass,** calibrate compass as follows:
 - a. Refer to vehicle owner's guide for more information.
 - b. Calibrate compass in a large open area away from large metal buildings.
 - c. Press and hold setting button located on bottom of mirror for six to nine seconds. Release button when "C" is indicated in display.
 - d. Safely drive vehicle two to three times in a circle at approximately 6 mph. Circle should be at least twice turning circle of vehicle.
 - e. Calibration is complete when a valid direction is displayed.
 - f. **On models equipped with convertible top or hardtop,** compass must be calibrated once with soft top or hardtop closed and once with soft top or hardtop open.

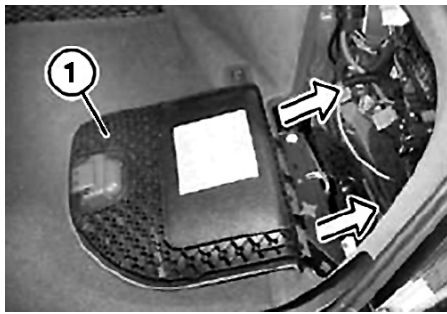


Fig. 3 Righthand luggage compartment trim flap removal

BTY1200000000538

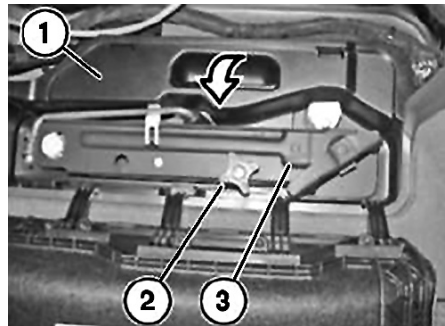


Fig. 4 Vehicle jack & battery cover removal

BTY1200000000539

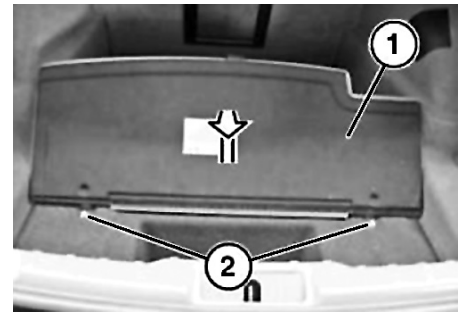


Fig. 5 Luggage compartment floor trim panel removal

BTY1200000000544

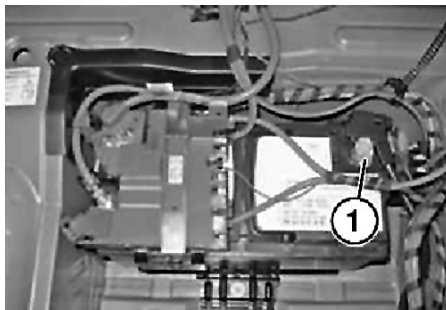


Fig. 6 Battery ground cable disconnection

BTY1200000000543

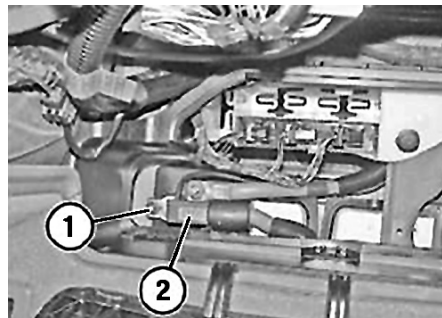


Fig. 7 Battery positive cable disconnection

BTY1200000000540

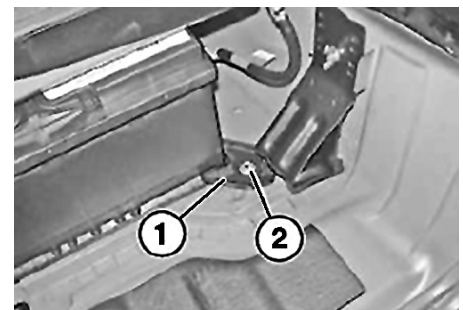


Fig. 8 Battery retainer bracket removal

BTY1200000000541

The material herein may not be used without the prior express written permission of the copyright holder, including, but not limited to reproduction or transmission in any form by any means such as electronic, mechanical, photocopying, recording or otherwise; nor may it be stored on any retrieval system of any nature.

"The data reported herein has been compiled from authoritative sources. While every effort is made by the analysts to attain accuracy, manufacturing changes as well as typographical errors and omissions may occur on occasion. The publisher cannot be responsible nor does it assume any responsibility whatsoever for such omissions, errors or changes."

MOTOR INFORMATION SYSTEMS
MOTOR is a trademark of Hearst Business Media
A Unit of Hearst Corporation
1301 W. Long Lake, Suite 300
Troy, MI 48098

Copyright © 2015 Hearst Business Media. All rights reserved.