

# BMW

## 2011-16 550i

### PRECAUTIONS

**Warning:** Unless directed otherwise, ignition and start switch must be in OFF or LOCK position and all electrical loads must be OFF before servicing any electrical component. Disconnect battery ground cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to vehicle or its components.

### BATTERY

#### Removal

1. Record all vehicle preset radio stations.
2. Turn OFF all lamps and accessories.
3. Ensure ignition switch is in OFF position.
4. Open righthand rear interior trim panel, **Fig. 1**.
5. Release battery ground cable locking nut (1), and remove battery ground cable, **Fig. 1**.
6. Open battery positive cable cover.
7. Release battery positive cable locking nut (1), and remove battery positive cable, **Fig. 2**.
8. Remove battery hold down screw (1) and battery hold down bracket (2), **Fig. 3**.
9. Slide battery to rear of vehicle, and disconnect ventilation hose (1), **Fig. 4**.
10. Remove battery.


#### Installation

1. Install battery.
2. Slide battery to front of vehicle and connect ventilation hose.
3. Install battery hold down bracket and battery hold down screw. **Torque** screw to 92 inch lbs.
4. Install battery positive cable and retaining nut. **Torque** nut to 92 inch lbs.
5. Close battery positive cable cover.
6. Install battery ground cable and locking nut. **Torque** nut to 92 inch lbs.
7. Close righthand rear interior trim panel.
8. Initialize power windows as follows:
  - a. Close all windows.
  - b. Press and hold each window switch



BTY120000000113


**Fig. 1 Battery ground cable removal**

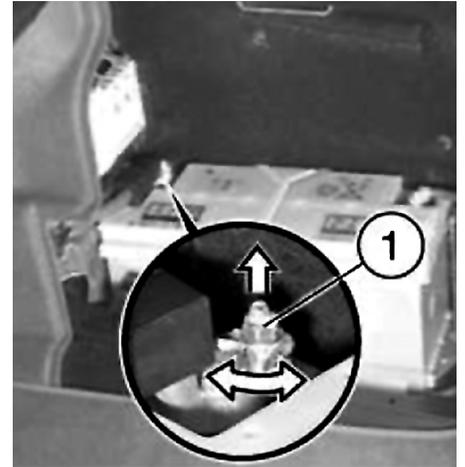

BTY120000000114

**Fig. 2 Battery positive cable removal**


- c. Verify proper one touch window operation.
9. **On models equipped with sunroof**, synchronize sunroof as follows:
  - a. Press and hold sunroof switch in lift direction.
  - b. After reaching full lift position, continue holding switch for an additional 30 seconds.
  - c. Release switch for five seconds.
  - d. Verify correct sunroof operation.
10. **On models equipped with mirror compass**, calibrate compass as follows:
  - a. Refer to vehicle owner's guide for more information.
  - b. Calibrate compass in a large open area away from large metal buildings.
  - c. Press and hold setting button located on bottom of mirror for six to nine seconds. Release button when "C" is indicated in display.
  - d. Safely drive vehicle two to three times in a circle at approximately six mph. Circle should be at least twice vehicles turning circle.
  - e. Calibration is complete when a valid direction is displayed.
  - f. **On models equipped with convertible top or hardtop**, compass must be calibrated once with soft top or hardtop closed and once with soft top or hardtop open.
11. **On all models**, initialize steering wheel angle as follows:

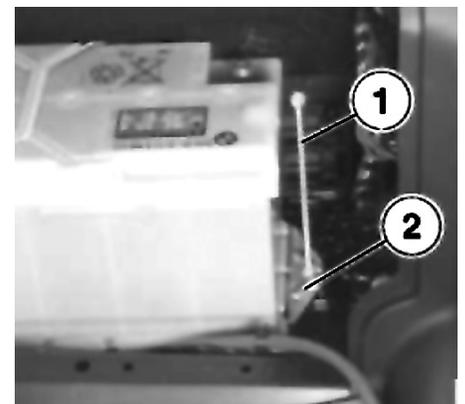

BTY120000000115

**Fig. 3 Battery hold down removal**

- a. Start engine.
  - b. Rotate steering wheel in lefthand direction to full lock.
  - c. Rotate steering wheel in righthand direction to full lock.
  - d. Rotate steering wheel to center position.
  - e. Turn engine OFF.
  - f. Turn engine ON and ensure engine lamp goes out.
12. Set clock and program radio stations back into radio as recorded at beginning of procedure.

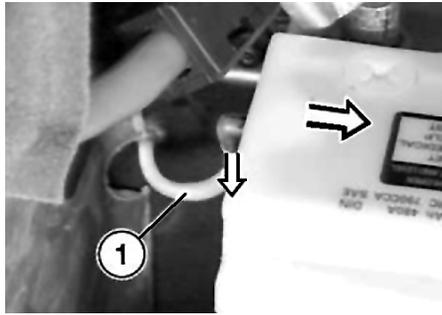

BTY120000000116

**Fig. 4 Battery ventilation hose removal**

---

The material herein may not be used without the prior express written permission of the copyright holder, including, but not limited to reproduction or transmission in any form by any means such as electronic, mechanical, photocopying, recording or otherwise; nor may it be stored on any retrieval system of any nature.

"The data reported herein has been compiled from authoritative sources. While every effort is made by the analysts to attain accuracy, manufacturing changes as well as typographical errors and omissions may occur on occasion. The publisher cannot be responsible nor does it assume any responsibility whatsoever for such omissions, errors or changes."

---

**MOTOR INFORMATION SYSTEMS**  
**MOTOR is a trademark of Hearst Business Publishing, Inc.**  
**A Unit of Hearst Corporation**  
**1301 W. Long Lake, Suite 300**  
**Troy, MI 48098**

Copyright © 2016 MOTOR Information Systems, a division of Hearst Business Publishing, Inc. All rights reserved.

---