

# BMW

## 2014-2016 X5 4.4L

### PRECAUTIONS

**Warning:** Unless directed otherwise, ignition and start switch must be in OFF or LOCK position and all electrical loads must be OFF before servicing any electrical component. Disconnect battery ground cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to vehicle or its components.


### BATTERY

#### Removal

1. Record all vehicle preset radio stations.
2. Turn OFF all lamps and accessories.
3. Ensure ignition switch is in OFF position.
4. Remove battery cover.
5. Disconnect battery ground cable.
6. Disconnect power distribution box electrical connector (1), **Fig. 1**.
7. Open cover (2) and disconnect positive battery cable (3), **Fig. 2**.
8. Disconnect ventilation hose at battery (1), **Fig. 2**.
9. Remove screws (4 & 6) and brackets, **Fig. 2**.
10. Remove battery hold down bolt (5) and hold down, **Fig. 2**.
11. Remove battery.

#### Installation


1. Install battery.
2. Install battery hold down and screw. **Torque** hold down screw to 92 inch lbs.
3. Install battery vent hose.
4. Install power distribution box and nut. **Torque** power distribution box nut to 19 ft. lbs.

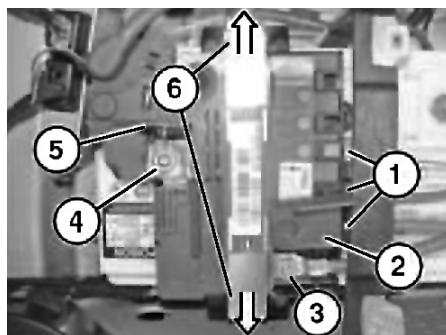

BTY120000000104

**Fig. 1** Power distribution box electrical connector

5. Connect positive battery cable to battery. **Torque** battery cable to 92 inch lbs.
6. Connect battery ground cable. **Torque** battery cable to 92 inch lbs.
7. Install battery cover.
8. Initialize power windows as follows:
  - a. Close all windows.
  - b. Press and hold each window switch in one touch closed position (2nd switch position) for 15–25 seconds.
  - c. Verify proper one touch window operation.
9. **On models equipped with sliding/pop-up roof**, synchronize sliding/pop-up roof as follows:
  - a. Press and hold sunroof switch in lift direction.
  - b. After reaching full lift position, continue holding switch for an additional 20 seconds.
  - c. Release switch for five seconds.
  - d. Verify correct sunroof operation.
10. **On models equipped with mirror compass**, calibrate compass as follows:
  - a. Calibrate compass in a large open area away from large metal buildings.

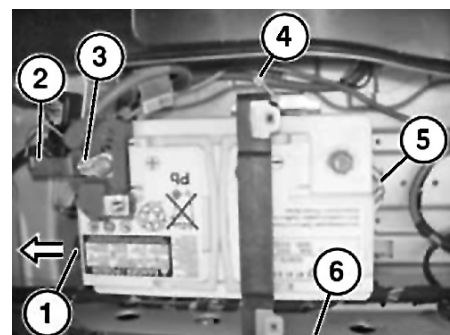

BTY120000000108

**Fig. 2** Battery hold down

- b. Press and hold setting button located on bottom of mirror for six to nine seconds. Release button when “C” is indicated in display.
  - c. Safely drive vehicle two to three times in a circle at approximately six mph. Circle size should be at least twice vehicles turning circle.
  - d. Calibration is complete when a valid direction is displayed.
  - e. **On models equipped with convertible top or hardtop**, compass must be calibrated once with soft top or hardtop closed and once with soft top or hardtop open.
11. **On all models**, initialize steering wheel angle as follows:
    - a. Start engine.
    - b. Rotate steering wheel lefthand to full lock.
    - c. Rotate steering wheel righthand to full lock.
    - d. Rotate steering wheel to center position.
    - e. Turn engine OFF.
    - f. Turn engine ON and ensure engine lamp goes out.
  12. Set clock and program radio stations back into radio as recorded at beginning of procedure.

The material herein may not be used without the prior express written permission of the copyright holder, including, but not limited to reproduction or transmission in any form by any means such as electronic, mechanical, photocopying, recording or otherwise; nor may it be stored on any retrieval system of any nature.

“The data reported herein has been compiled from authoritative sources. While every effort is made by the analysts to attain accuracy, manufacturing changes as well as typographical errors and omissions may occur on occasion. The publisher cannot be responsible nor does it assume any responsibility whatsoever for such omissions, errors or changes.”

MOTOR INFORMATION SYSTEMS  
 MOTOR is a trademark of Hearst Business Publishing, Inc.  
 A Unit of Hearst Corporation  
 1301 W. Long Lake, Suite 300  
 Troy, MI 48098

Copyright © 2016 MOTOR Information Systems, a division of Hearst Business Publishing, Inc. All rights reserved.