

CHEVROLET

2005-06 Equinox

PRECAUTIONS

Warning: Batteries produce explosive gases, contain corrosive acid, and supply levels of electrical current high enough to cause burns. Therefore, to reduce the risk of personal injury when working near a battery: Always shield your eyes and avoid leaning over the battery whenever possible; do not expose the battery to open flames or sparks; do not allow the battery electrolyte to contact the eyes or skin; flush immediately and thoroughly any contacted areas with water, and get medical help.

Warning: Unless directed otherwise, the ignition and start switch must be in the OFF or LOCK position, and all electrical loads must be OFF before servicing any electrical component. Disconnect the battery ground cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to the vehicle or its components.

For vehicles equipped with OnStar® (UE1) with Back Up Battery, the back up battery is a redundant power supply to allow limited OnStar® functionality in the event of a main vehicle battery power disruption to the VCIM (OnStar® module). Do not disconnect the main vehicle battery or remove the OnStar® fuse with the ignition key in any position other than OFF. Retained Accessory Power (RAP) should be allowed to time out or be disabled (simply opening the driver door should disable RAP) before disconnecting power. Disconnecting power to the OnStar® module in any way while the ignition is ON or with RAP activated may cause activation of the OnStar® Back Up Battery (BUB) system and will discharge and permanently damage the BUB. Once the BUB is activated, it will stay on until it has completely discharged. The BUB is not rechargeable and, once activated, the BUB must be replaced.

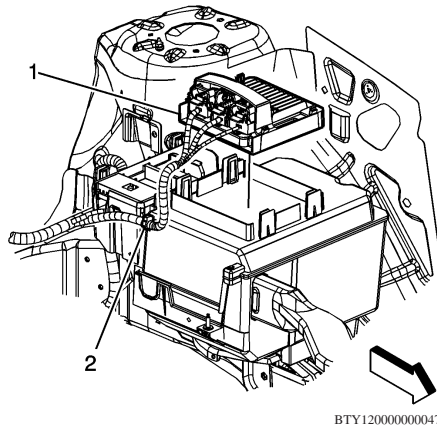


Fig. 1 PCM removal

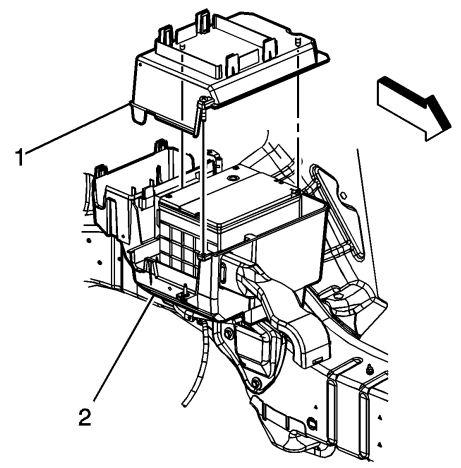


Fig. 2 Battery box cover removal

BATTERY Removal

Caution: When performing service on or near the SIR components or the SIR wiring, the SIR system must be disabled. Failure to observe the correct procedure could cause deployment of the SIR components, personal injury, or unrequired SIR system repairs.

Warning: Do not tip battery over a 45 degree angle or acid could spill causing serious personal injury.

1. Record radio anti-theft code and station presets.
2. Turn off all lamps and accessories.
3. Turn ignition switch to OFF position.
4. Disconnect Powertrain Control Module (PCM) wire harness (2) from battery box cover, **Fig. 1**.
5. Remove PCM bracket with PCM (1) from top of battery box cover, **Fig. 1**. Position PCM and bracket aside.
6. Loosen battery box cover screws and remove cover, **Fig. 2**.
7. Loosen battery ground cable terminal bolt and disconnect ground cable from battery, **Fig. 3**.
8. Loosen battery positive cable terminal


- bolt and disconnect positive cable (2) from battery, **Fig. 4**.
9. Remove battery hold down retainer bolt and retainer, **Fig. 5**.
10. Remove battery from battery box.

Installation

Clean any existing corrosion from the battery terminal bolt flange and the battery cable end.


Warning: Do not tip battery over a 45 degree angle or acid could spill causing serious personal injury.

1. Install battery to battery tray.
2. Install battery hold down retainer and bolt, **Fig. 5**. **Torque** bolt to 11 ft. lbs.
3. Connect positive battery cable to battery, **Fig. 4**. **Torque** cable terminal bolt to 13 ft. lbs.
4. Connect battery ground cable to battery, **Fig. 3**. **Torque** cable terminal bolt to 13 ft. lbs.
5. Install battery box cover, **Fig. 2**.
6. Install PCM bracket with PCM to battery box cover, **Fig. 1**.
7. Reset all preset and theft codes previously recorded to radio.

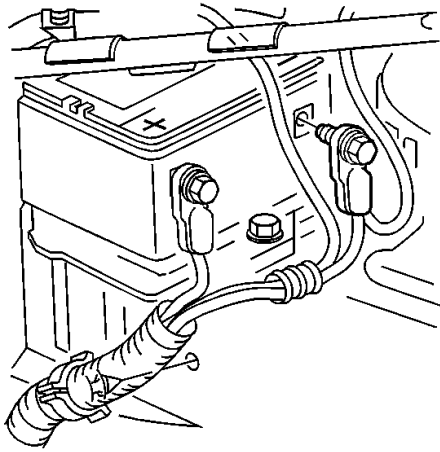


BTY120000000481

Fig. 3 Battery ground cable disconnection

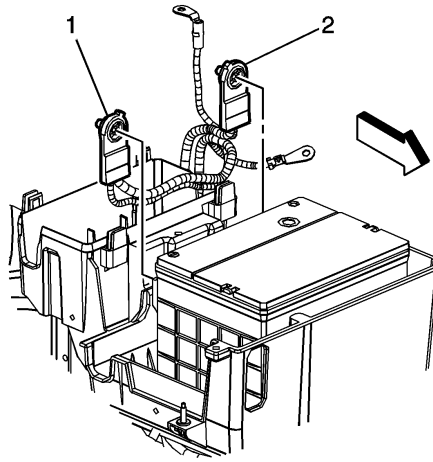

BTY120000000482

Fig. 4 Battery positive cable disconnection

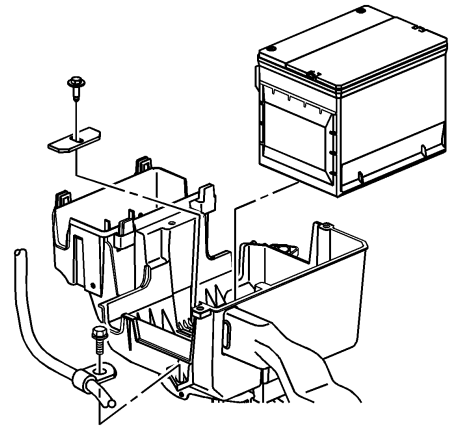

BTY120000000483

Fig. 5 Battery removal

The material herein may not be used without the prior express written permission of the copyright holder, including, but not limited to reproduction or transmission in any form by any means such as electronic, mechanical, photocopying, recording or otherwise; nor may it be stored on any retrieval system of any nature.

"The data reported herein has been compiled from authoritative sources. While every effort is made by the analysts to attain accuracy, manufacturing changes as well as typographical errors and omissions may occur on occasion. The publisher cannot be responsible nor does it assume any responsibility whatsoever for such omissions, errors or changes."

"Portions of materials herein have been reprinted with permission of General Motors Company, Service Technology Group"

MOTOR INFORMATION SYSTEMS
MOTOR is a trademark of Hearst Business Media
A Unit of Hearst Corporation
1301 W. Long Lake, Suite 300
Troy, MI 48098

Copyright © 2012 Hearst Business Media. All rights reserved.