

CHEVROLET 2006-11 HHR

PRECAUTIONS

Warning: Batteries produce explosive gases, contain corrosive acid, and supply levels of electrical current high enough to cause burns. Therefore, to reduce the risk of personal injury when working near a battery: Always shield your eyes and avoid leaning over the battery whenever possible; do not expose the battery to open flames or sparks; do not allow the battery electrolyte to contact the eyes or skin; flush immediately and thoroughly any contacted areas with water, and get medical help.

Warning: Unless directed otherwise, the ignition and start switch must be in the OFF or LOCK position, and all electrical loads must be OFF before servicing any electrical component. Disconnect the battery ground cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to the vehicle or its components.

For vehicles equipped with OnStar® (UE1) with Back Up Battery, the back up battery is a redundant power supply to allow limited OnStar® functionality in the event of a main vehicle battery power disruption to the VCIM (OnStar® module). Do not disconnect the main vehicle battery or remove the OnStar® fuse with the ignition key in any position other than OFF. Retained Accessory Power (RAP) should be allowed to time out or be disabled (simply opening the driver door should disable RAP) before disconnecting power. Disconnecting power to the OnStar® module in any way while the ignition is ON or with RAP activated may cause activation of the OnStar® Back Up Battery (BUB) system and will discharge and permanently damage the BUB. Once the BUB is activated, it will stay on until it has completely discharged. The BUB is not rechargeable and, once activated, the BUB must be replaced.

BATTERY

Removal

Caution: When performing service on

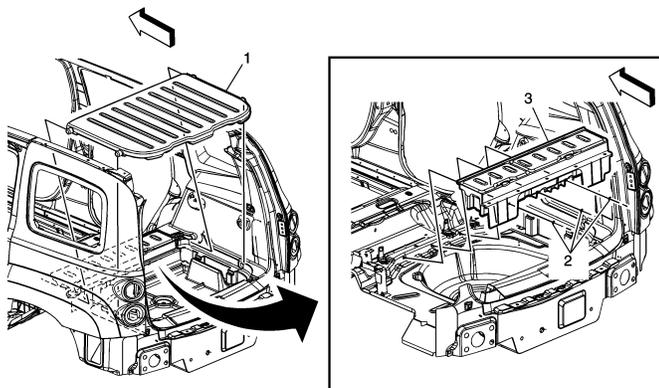


Fig. 1 Rear floor trim panel & trim plate removal


or near the SIR components or the SIR wiring, the SIR system must be disabled. Failure to observe the correct procedure could cause deployment of the SIR components, personal injury, or unrequired SIR system repairs.

1. Record radio anti-theft code and station presets.
2. Turn off all lamps and accessories.
3. Turn ignition switch to OFF position.
4. Remove carpet on load floor rear trim panel.
5. Remove rear floor trim panel (1), Fig. 1.
6. Remove rear floor trim plate (3), Fig. 1.
7. Remove rear compartment trim panel, Fig. 2.
8. Loosen battery ground cable nut (1), Fig. 3.
9. Remove battery ground cable from battery.
10. Remove spare tire.
11. Open battery positive cable cover (2), Fig. 4.
12. Loosen battery positive cable nut (1), Fig. 4.
13. Remove battery positive cable from battery.
14. Remove battery vent tube from battery, Fig. 5.
15. Remove battery hold down retainer bolts and retainers, Fig. 6.
16. Remove battery from vehicle. Do not tip battery more than 40 degrees during removal.

Installation


Clean any existing oxidation from the contact face of the battery terminal and battery cable using a wire brush before installing the battery cable to the battery.

1. Install battery to vehicle. Do not tip battery more than 40 degrees during installation.
2. Install battery hold down retainers and bolts, Fig. 6. Torque bolt to 18 ft. lbs.
3. Install battery vent tube to battery, Fig. 5.
4. Connect positive battery cable to battery, Fig. 4. Torque cable terminal nut to 11 ft. lbs.
5. Close battery positive cable cover.
6. Install spare tire.
7. Connect battery ground cable to battery, Fig. 3. Torque cable terminal nut to 11 ft. lbs.
8. Install rear compartment trim panel, Fig. 2.
9. Install rear floor trim plate (3), Fig. 1. Torque trim plate nuts (2) to 80 inch lbs.
10. Install rear floor trim panel (1), Fig. 1.
11. Install carpet on load floor rear trim panel.
12. Reset all preset and theft codes previously recorded to radio.

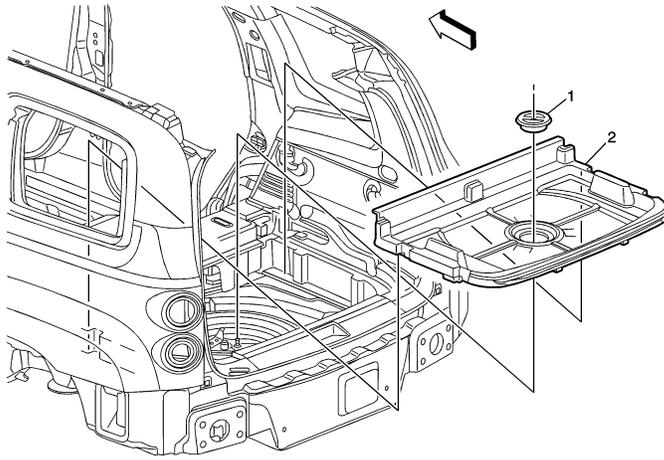


BTY120000000474

Fig. 2 Rear compartment trim panel removal

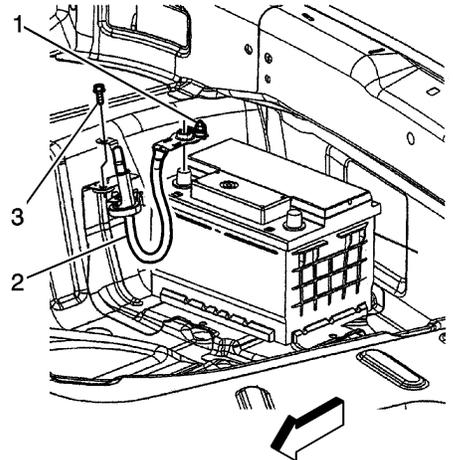


BTY120000000475

Fig. 3 Battery ground cable disconnection

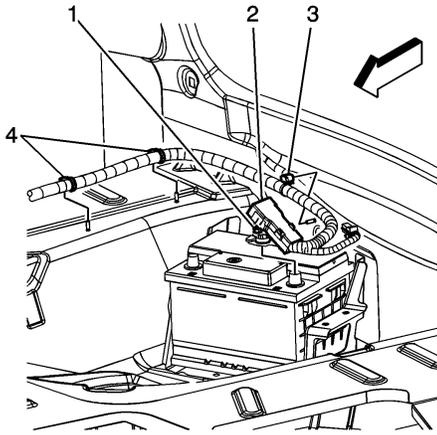


BTY120000000476

Fig. 4 Battery positive cable disconnection

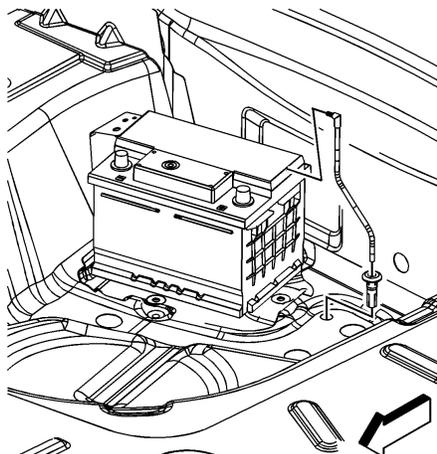

BTY120000000477

Fig. 5 Battery vent tube removal

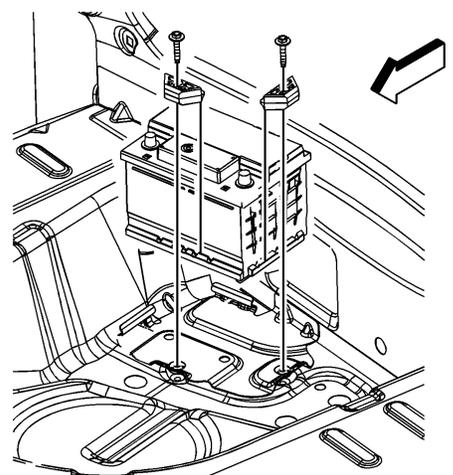

BTY120000000478

Fig. 6 Battery removal

The material herein may not be used without the prior express written permission of the copyright holder, including, but not limited to reproduction or transmission in any form by any means such as electronic, mechanical, photocopying, recording or otherwise; nor may it be stored on any retrieval system of any nature.

"The data reported herein has been compiled from authoritative sources. While every effort is made by the analysts to attain accuracy, manufacturing changes as well as typographical errors and omissions may occur on occasion. The publisher cannot be responsible nor does it assume any responsibility whatsoever for such omissions, errors or changes."

"Portions of materials herein have been reprinted with permission of General Motors Company, Service Technology Group"

MOTOR INFORMATION SYSTEMS
MOTOR is a trademark of Hearst Business Media
A Unit of Hearst Corporation
1301 W. Long Lake, Suite 300
Troy, MI 48098

Copyright © 2012 Hearst Business Media. All rights reserved.