

CHRYSLER

2002-04 Concorde

PRECAUTIONS

Warning: The battery is vented to release excess hydrogen gas that is created when the battery is being charged or discharged. However, even with these vents, hydrogen gas can collect in or around the battery. If hydrogen gas is exposed to flame or sparks, it may ignite. Do not smoke, use flame, or create sparks near the battery. Personal injury and vehicle damage may result. The battery contains sulfuric acid, which is poisonous and caustic. Avoid contact with the skin, eyes, or clothing. In the event of contact, flush with water and call a physician immediately. Keep out of reach of children.

Warning: To protect hands from battery acid, a suitable pair of heavy duty rubber gloves, not the household type, should be worn when removing or servicing a battery. Safety glasses also should be worn. Remove metallic jewelry worn on hands or wrists to avoid injury by accidental arcing of battery current.

Warning: Do not allow jumper cable clamps to touch each other when connected to a booster source. When using a high output boosting device, do not allow the disabled vehicle's battery to exceed 16 volts. Personal injury or damage to electrical system can result.

It is important that the battery, starting system, and charging system be thoroughly tested and inspected any time a battery needs to be charged or replaced. The cause of abnormal discharge, over charging or early battery failure must be corrected before a battery is replaced or returned to service.

The battery Group Size number, the Cold Cranking Amperage (CCA) rating, and the Reserve Capacity (RC) rating or Ampere-Hours (AH) rating can be found on the original equipment battery label. Be certain that a replacement battery has the correct Group Size number, as well as CCA and RC or AH ratings that equal or exceed the original equipment specification for the vehicle being serviced.

BATTERY Removal

This vehicle is equipped with a single, 12-volt, maintenance-free battery located under the hood on the lefthand side of vehicle.

1. Verify that ignition switch and all accessories are "OFF."
2. Turn steering wheel to full righthand position.
3. Disconnect and isolate battery ground cable remote terminal from remote battery post.

4. Remove air cleaner housing.
5. Remove battery splash shield.
6. Disconnect heater blanket cord, if equipped, **Fig. 1**.
7. Remove two short bolts from battery hold down, and remove hold down.
8. Slide battery toward rear of vehicle.
9. Disconnect battery ground cable and positive cable from battery.
10. Remove battery and battery heater blanket from battery tray as a unit, if equipped. Carefully slide heater blanket straight off battery, **Fig. 1**.

Installation

1. Clean and inspect battery heater blanket, if equipped.
2. Install battery heater blanket on battery, if equipped.
3. Position battery in battery tray.
4. Connect battery positive and battery ground cables. **Torque** battery cable clamp nuts to 150 inch lbs.
5. Connect heater blanket cord, if equipped.
6. Install battery hold down and install hold down bolt. **Torque** bolt to 150 inch lbs.
7. Install battery splash shield.
8. Install air cleaner housing.
9. Connect battery ground cable remote terminal at remote battery post.

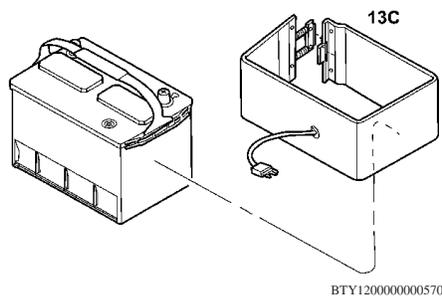


Fig. 1 Battery heater blanket removal

The material herein may not be used without the prior express written permission of the copyright holder, including, but not limited to reproduction or transmission in any form by any means such as electronic, mechanical, photocopying, recording or otherwise; nor may it be stored on any retrieval system of any nature.

"The data reported herein has been compiled from authoritative sources. While every effort is made by the analysts to attain accuracy, manufacturing changes as well as typographical errors and omissions may occur on occasion. The publisher cannot be responsible nor does it assume any responsibility whatsoever for such omissions, errors or changes."

MOTOR INFORMATION SYSTEMS
MOTOR is a trademark of Hearst Business Media
A Unit of Hearst Corporation
1301 W. Long Lake, Suite 300
Troy, MI 48098

Copyright © 2012 Hearst Business Media. All rights reserved.
