

MERCEDES-BENZ

2007-11 G55 AMG

PRECAUTIONS

Warning: Risk of explosion when charging lead batteries with battery electrolyte containing sulfuric acid. A highly explosive gas mixture is created that ignites by means of fire, sparks, open flames and smoking.

Warning: The battery electrolyte contains diluted sulfuric acid that causes caustic burns to the skin, eyes and mucous membranes in the event of contact. Bonded electrolyte is just as caustic as liquid electrolyte. Battery electrolyte mist causes caustic burns to eyes. If inhaled, this can result in caustic burns to mucous membranes and respiratory tracts.

Warning: In event of a short circuit from battery positive to ground, battery terminals and conductive objects causing short circuit, such as a tool or jewelry, become hot in seconds and cause burns.

Warning: If battery electrolyte is swallowed, this can result in symptoms of poisoning such as headache, dizziness, stomach ache, respiratory paralysis, unconsciousness, vomiting, caustic burns and cramps. Absorption of lead in body through contact with leaded components (battery terminals, lead plates in damaged batteries) damages blood, nerves and kidneys; lead compounds are also toxic for reproduction.

Caution: Wear acid-resistant gloves and clothing and safety glasses with side guards.

Only charge lead batteries in well-ventilated rooms with appropriate voltage and appropriate current with approved

chargers, taking into account the instructions of battery and charger manufacturers.

Caution: Do not place any conductive objects on battery, and do not wear any conductive jewelry (risk of short circuit).

Always disconnect the ground terminal first; always connect positive terminal first (risk of short circuit caused by tool).

Only store, transport and install batteries with liquid battery electrolyte horizontally, otherwise battery electrolyte can escape from the degassing holes.

BATTERY


Removal

1. Remove rear cup holder, if equipped.
2. Remove cover of battery (G1) in rear footwell, **Fig. 1**.
3. Disconnect ground line from battery.
4. Remove hold down bracket.
5. Detach positive line on battery.
6. Remove battery.

Installation

1. Install battery.
2. Attach positive line to battery.
3. Install hold down bracket.
4. Connect ground line to battery.
5. Install cover of battery.
6. Install rear cup holder, if equipped.
7. Activate steering angle sensor as follows:
 - a. This message appears in multifunction display when battery has been disconnected, "EI-STAB-PROGRAM - LOCATE WORKSHOP."

- b. Start engine and run at idling speed.
 - c. Turn steering wheel from one lock position to the other, then center it.
 - d. Message "EI-STAB-PROGRAM - LOCATE WORKSHOP" goes out in multifunction display.
8. Synchronize power windows as follows:
 - a. Switch on ignition.
 - b. Actuate power window switch until window is closed, then continue to hold switch depressed for approximately one second.
 - c. Switch off ignition.
 - d. Synchronization also can be performed via a suitably programmed scan tool using synchronization routine.
 9. Normalize seats as follows:
 - a. Switch on ignition.
 - b. Adjust seat forward as far as stop and, as soon as mechanical stop is reached, continue to keep seat adjustment switch pressed for approximately one second.
 - c. Move head restraint upwards as far as stop and, as soon as mechanical stop is reached, continue to keep head restraint adjustment switch pressed for approximately one second.
 - d. Switch off ignition.
 - e. Normalizing can also be performed via a suitably programmed scan tool using synchronization routine.
 10. Read out fault memory, and erase using a suitably programmed scan tool.
 11. Release radio (see operator's manual).
 12. Set time on instrument cluster (see operator's manual).
 13. Set time on timer of stationary heater.

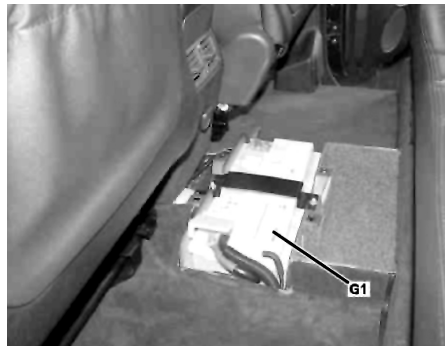

BTY120000000807

Fig. 1 Battery ground removal

The material herein may not be used without the prior express written permission of the copyright holder, including, but not limited to reproduction or transmission in any form by any means such as electronic, mechanical, photocopying, recording or otherwise; nor may it be stored on any retrieval system of any nature.

"The data reported herein has been compiled from authoritative sources. While every effort is made by the analysts to attain accuracy, manufacturing changes as well as typographical errors and omissions may occur on occasion. The publisher cannot be responsible nor does it assume any responsibility whatsoever for such omissions, errors or changes."

MOTOR INFORMATION SYSTEMS
MOTOR is a trademark of Hearst Business Media
A Unit of Hearst Corporation
1301 W. Long Lake, Suite 300
Troy, MI 48098

Copyright © 2012 Hearst Business Media. All rights reserved.
